



# 1587/1577 Insulation Tester Quick Reference Guide

⚠ See Users Manual for "Safety Information" and complete operating information.


## Fuse Test

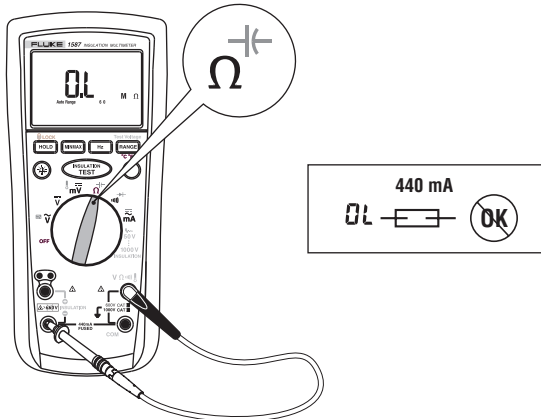


## Voltage $\tilde{V}$ $\bar{V}$ mV

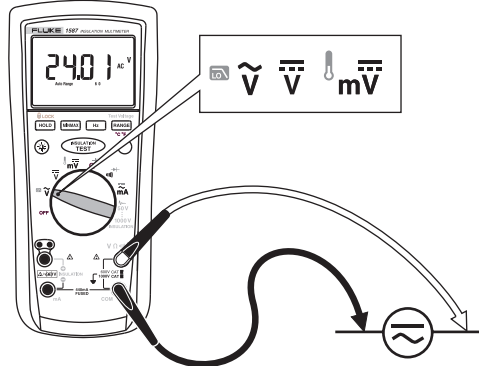


## Temperature

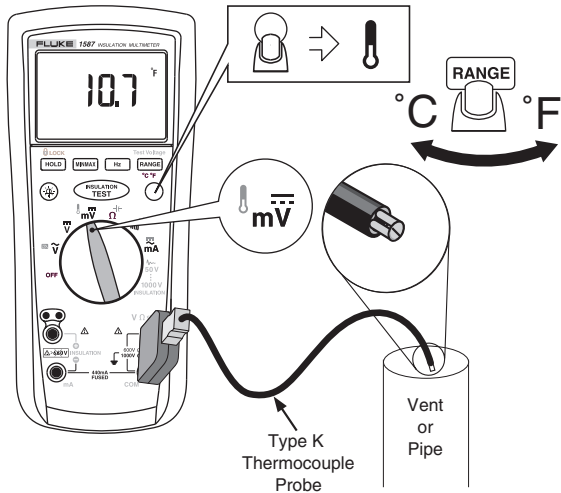


## Resistance Ω

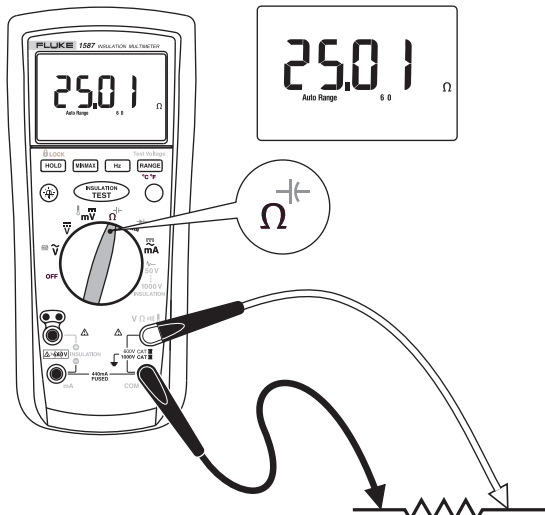


## Testing Insulation

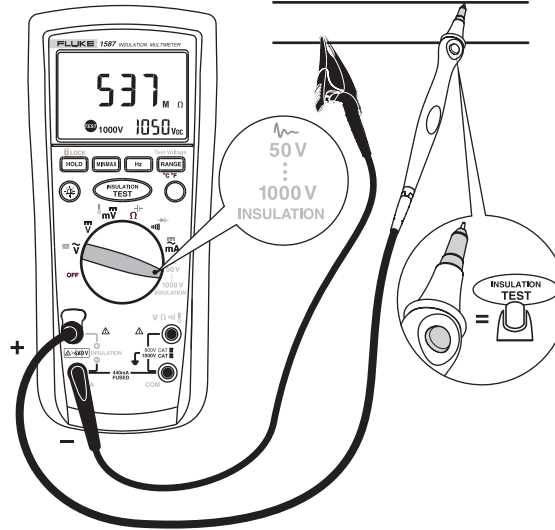


## Smoothing (Power Up Option)

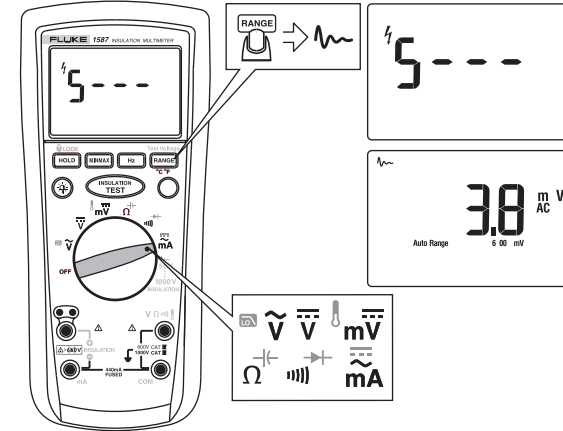


## Continuity

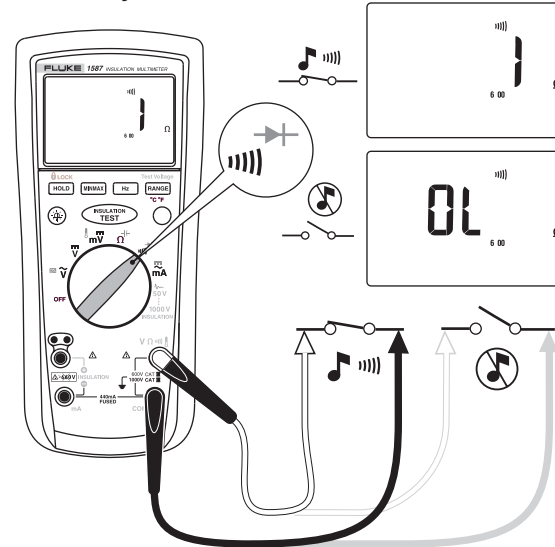


## Current mA, mA

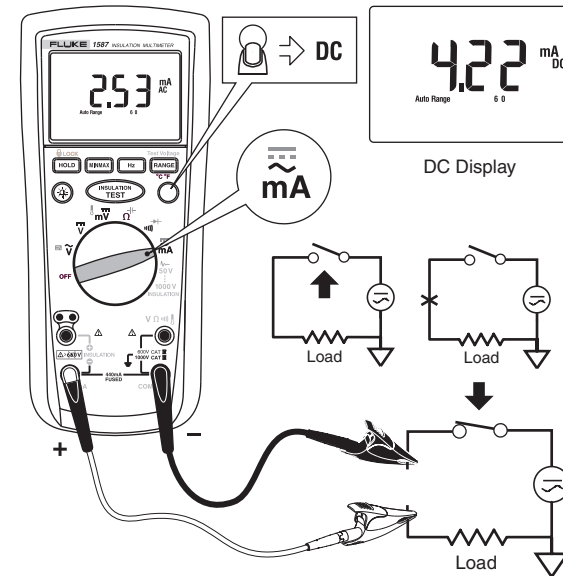

## Diode Test $\rightarrow$

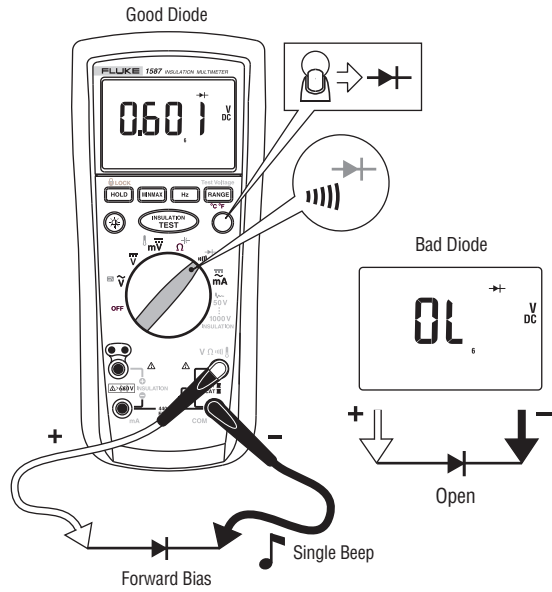


## Resistance $\Omega$


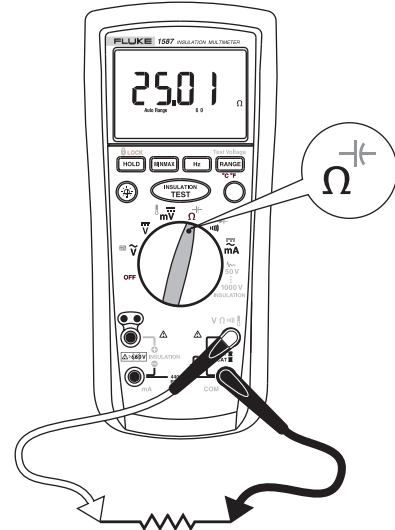


## Frequency (Hz)


AC/DC Voltage Frequency

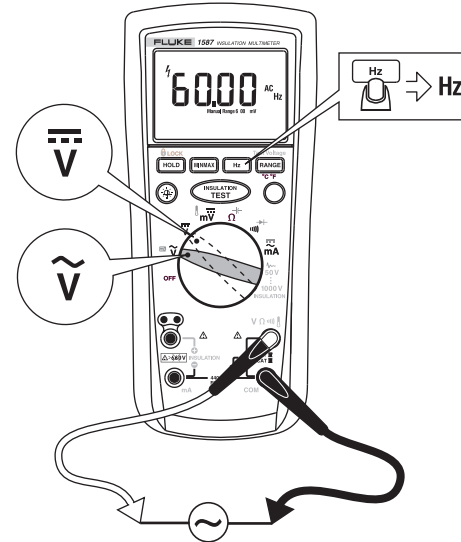


## Low Pass Filter (Model 1587)

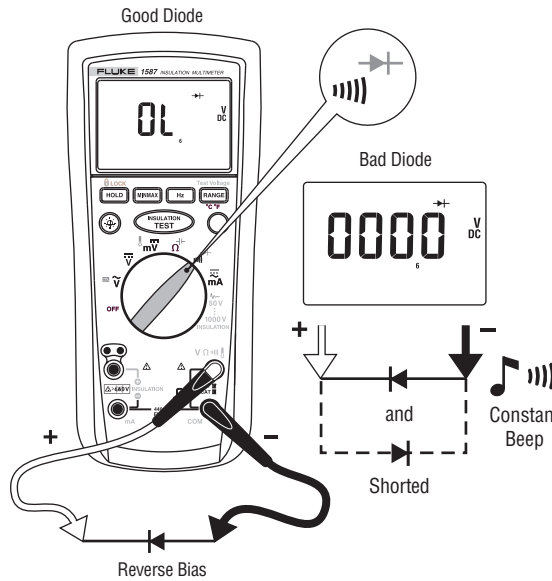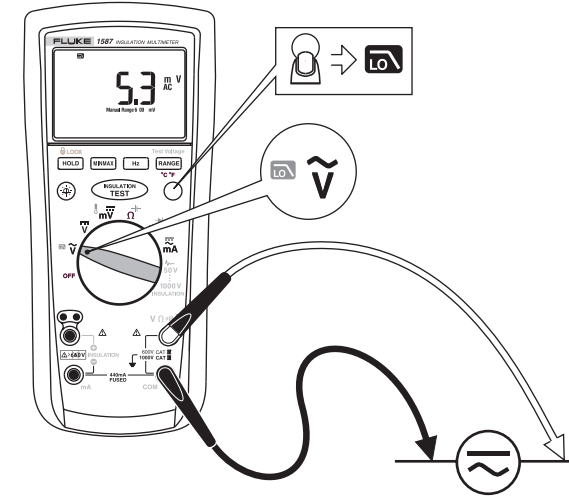

## Capacitance $\mu$ F

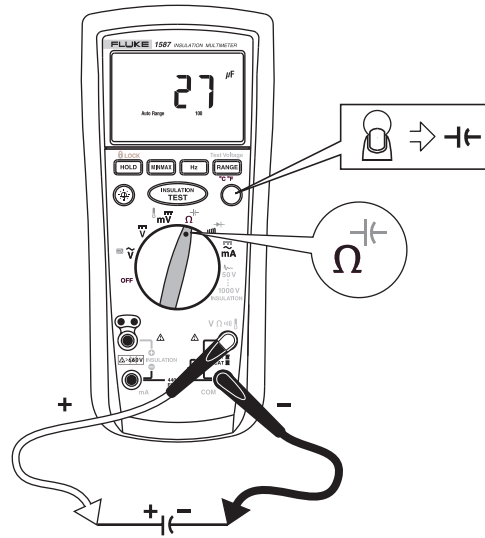

## AC/DC Current Frequency

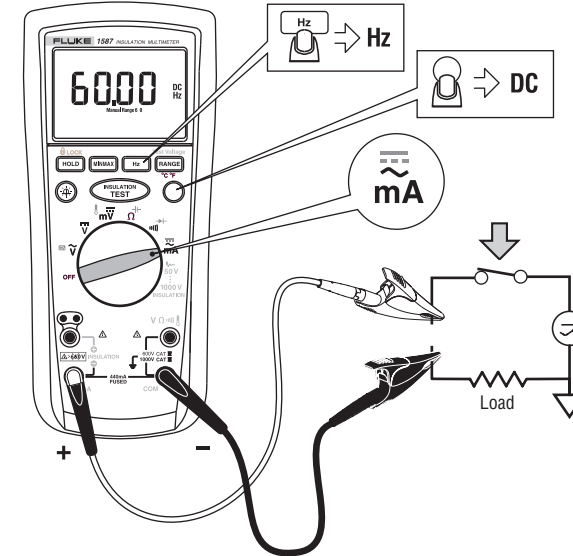

## Battery and Fuse Replacement $\oplus/\ominus$

