


USER INSTRUCTIONS

Universal 1- & 2-channel Programmable 2-wire Transmitter

IPAQ-21LX
IPAQ-22LX

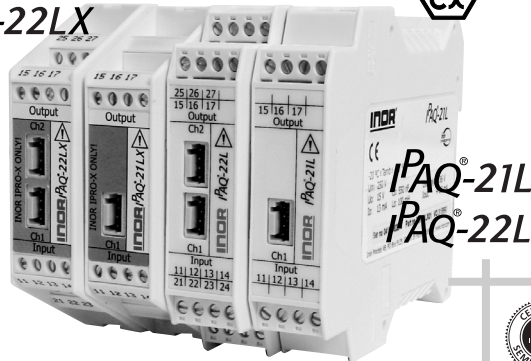

The manual must be read prior to adjustment and/or installation. All information subject to change without notice.

INOR

www.inor.com, www.inor.se

MEASURE OF SUCCESS

INTRODUCTION

IPAQ-22LX is an Intrinsic Safe, 2-channel universal and intelligent 2-wire rail-mounted transmitter for temperature and other low-level measurement Ex-applications. IPAQ-21LX = 1 channel. IPAQ-21L/-22L are the non-Intrinsic Safe versions for use in safe areas.

GENERAL INFORMATION

The transmitter is configured from a standard IBM compatible PC by using the IPRO software version 4.31 or later. The latest version of IPRO can be downloaded from <http://www.inor.com>. When the transmitter is set from a PC no calibration is needed.

When calibrating/configuring the IPAQ-21LX/-22LX ATEX certified version of IPRO-X cable must be used.

Please observe that the 2 channels have separate configuration outlets so put the IPRO-X plug in outlet 1 or 2 depending on which channel to configure.

The transmitter is polarity protected for the power supply and will not be damaged by connecting with the wrong polarity, but the output will be 0 mA.

The maximum load in the output loop depends on the supply voltage, see "DATA shortform"

"Isolation input/output/PC" mentioned in the data sheet, indicates IS galvanic isolation like an isolating barrier. Therefore ordinary power supplies with $U_m < 250$ VAC can be used with IPAQ-22LX.

Sensor wire check: the transmitter uses a pulsating technique to monitor sensor break or sensor shortened to avoid measuring errors. This pulsating signal may interfere with some electronic calibrators. By selecting "Sensor Break = None" in the IPRO software and download the configuration into the transmitter the pulsating signal is turned off.

SWEDEN

INOR
PROCESS AB

ADDRESS PO Box 9125
SE-200 39 MALMÖ, Sweden
PHONE +46-40-31 25 60
FAX +46-40-31 25 70
E-MAIL support@inor.se

FINLAND

INOR
TRANSMITTER OY

ADDRESS Unikkotie13
FI-01300 VANTAA, Finland
PHONE +358- 9-83850210
FAX +358-9-83850219
E-MAIL js.inor@surfeu.fi

GERMANY

INOR
TRANSMITTER GMBH


ADDRESS Rodenbacher Chaussee 6
DE-63457 Hanau-Wolfgang; Germany
PHONE +49-6181-582940
FAX +49-6181-582944
E-MAIL inor.gmbh@t-online.de

USA

INOR
TRANSMITTER INC.

ADDRESS 1860 Renaissance Blvd.
Sturtevant, WI 53177, USA
PHONE +1-262-884-4535
FAX +1-262-884-4537
E-MAIL service@inor.com

DIMENSIONS

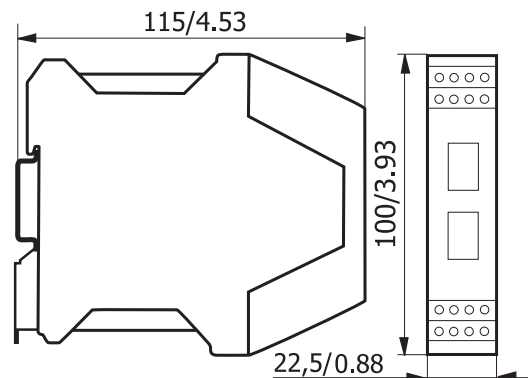

mm/inches

CONFIGURATION

The IPAQ-21LX/-22LX/-21L/-22L transmitter must be powered, when you configure it, (see "Connections" fig.1). If IPRO (the IPAQ software) isn't installed in your PC, install the software.

For keeping the safety of the internal circuits in the IPAQ-21LX/-22LX, always use an ATEX -approved IPRO-X configuration cable when making a configuration.

Before configuring an operating IPAQ-21LX/-22LX make sure the input wiring is not connected to hazardous area.

When choosing differential temperature measurements with Pt100 be sure to select "sensor break" = none. For IPAQ-21L/-22L only, the transmitter can be configured during operation. The output is frozen while transmission from PC to IPAQ takes place. When transfer is done the transmitter uses the new parameters.


DATA (shortform)

Power supply: IPAQ-21LX/-22LX/-21L/-22L
8 to 36 VDC

Isolation in/out: 1500 VAC

Output: 4-20 mA limit 23 mA

Operating temperature: $-20 \leq T_{amb} \leq +60$ °C IPAQ-21LX/-22LX
 $-4 \leq T_{amb} \leq +140$ °F IPAQ-21LX/-22LX
 $-20 \leq T_{amb} \leq +70$ °C IPAQ-21L/-22L
 $-4 \leq T_{amb} \leq +158$ °F IPAQ-21L/-22L

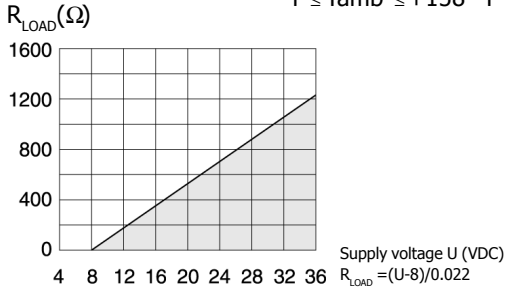

IPAQ-21LX/-22LX EX-DATA

Approval Demko 03 ATEX 134845X

Ex II (1)GD [Ex ia] IIC

Approval Г OCT CTB No. POCC SE. ГБ 04. B00145 [Ex ia] IICX

Input (terminals 11-14, 21-24)

(Intrinsically safe sensor terminals) U_o : 15 V
 I_o : 13 mA
 L_o : 100 mH
 C_o : 550 nF

The IPAQ-21LX/22LX shall be placed outside the hazardous area.
For the Russian market the installation must be made acc. to Г OCT Standard P51330.13-99

CABLE LENGTH

For Ex-version IPAQ-21LX/22LX observe that maximum input cable length is restricted by cable parameters. The total capacitance, inductance and ratio inductance/resistance must be within the limits given by the certificate for the transmitter and EN 500020, EN60079-14.

If the connected sensor includes capacitance and inductance these values must be subtracted from C_o and L_o

To calculate maximum length of the cable, use the data-sheet for the cable to get the cable capacitance/meter. To get the maximum length of the cable use the formula:

Lengthmax= C_o/C where L_{max} is in meter, C_o is from Ex-data above and C is cable capacitance/m (nF/m)

Lengthmax= L_o/L where L_{max} is in meter, L_o is from Ex-data above and L is cable inductance/m (mH/m)

Use the smallest Lengthmax of these two calculated values.

CONNECTIONS

IPAQ-21L/-22L have screw plug connectors with coding for connecting to the right position.

IPAQ-21LX/-22LX can be supplied with either fixed terminals or screw plug-in connectors with coding.


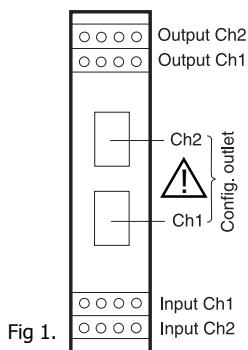


Fig 1.

- Power supply, load and output signal are connected according to figure below.
- Input signal is connected according to one of the figures 2-8

Cover with the delivered plastic plugs during operation.

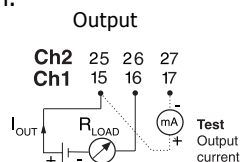

INSTALLATION

IPAQ-21LX/-22LX must be installed in safe area.

IPAQ-21LX/-22LX/-21L/-22L are designed to fit on a standard DIN Rail.

Input Ch2 21 22 23 24
Ch1 11 12 13 14
Fig 2 RTD 4-wire connection

Fig 2





Fig 3

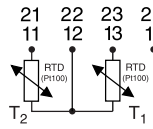


Fig 4




Fig 5

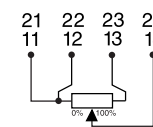


Fig 6




Fig 7

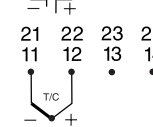


Fig 8

RTD 4-wire connection

RTD 3-wire connection

Pt100 Diff temperature $T_1 > T_2$

Potentiometer 3-wire connection

Potentiometer 4-wire connection

Voltage mV

Thermocouple

ORDERING TABLE

IPAQ-21L,	Non-Ex, 1-Ch	70IP21L001
IPAQ-22L,	Non-Ex, 2-Ch	70IP22L001
IPAQ-21LX,	Ex, 1-Ch Fixed conn.	70IP21LX01
IPAQ-21LX,	Ex, 1-Ch Plug-in conn.	70IP21LX02
IPAQ-22LX,	Ex, 2-Ch Fixed conn.	70IP22LX01
IPAQ-22LX,	Ex, 2-Ch Plug-in conn.	70IP22LX02
PC Configuration Kit		70CFG00092
Configuration		70CAL00001

LIMITED WARRANTY

INOR Process AB, or any other affiliated company within the Inor Group (hereinafter jointly referred to as "Inor"), hereby warrants that the Product will be free from defects in materials or workmanship for a period of five (5) years from the date of delivery ("Limited Warranty"). This Limited Warranty is limited to repair or replacement at Inor's option and is effective only for the first end-user of the Product. Upon receipt of a warranty claim, Inor shall respond within a reasonable time period as to its decision concerning:

- Whether Inor acknowledges its responsibility for any asserted defect in materials or workmanship; and, if so,
- the appropriate cause of action to be taken (i.e. whether a defective product should be replaced or repaired by Inor).

This Limited Warranty applies only if the Product:

- is installed according to the instructions furnished by Inor;
- is connected to a proper power supply;
- is not misused or abused; and
- there is no evidence of tampering, mishandling, neglect, accidental damage, modification or repair without the approval of Inor or damage done to the Product by anyone other than Inor.

This Limited Warranty is provided by Inor and contains the only express warranty provided. **INOR SPECIFICALLY DISCLAIMS ANY EXPRESS WARRANTY NOT PROVIDED HEREIN AND ANY IMPLIED WARRANTY, GUARANTEE OR REPRESENTATION AS TO SUITABILITY FOR ANY PARTICULAR PURPOSE, PERFORMANCE, QUALITY AND ABSENCE OF ANY HIDDEN DEFECTS, AND ANY REMEDY FOR BREACH OF CONTRACT, WHICH BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION, OPERATION OF LAW, CUSTOM OF TRADE OR COURSE OF DEALING, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. EXCEPT AS PROVIDED HEREIN, INOR FURTHER DISCLAIMS ANY RESPONSIBILITY FOR LOSSES, EXPENSES, INCONVENIENCES, SPECIAL, DIRECT, SECONDARY OR CONSEQUENTIAL DAMAGES ARISING FROM OWNERSHIP OR USE OF THE PRODUCT.**

Products that are covered by the Limited Warranty will either be repaired or replaced at the option of Inor. Customer pays freight to Inor, and Inor will pay the return freight by post or other "normal" way of transport. If any other type of return freight is requested, customer pays the whole return cost.